



## Remote Functions

**BACK** – Brings up a list of recently watched channels, or if none are available, it will bring you to the Guide

**MENU** – Brings you to the 'Your TV' Menu

**INFO** – press INFO once to see the current program information. press INFO twice to bring up the Search Menu. Also has picture-in-picture of your current program, while you search for similar titles or recording options

**EXIT** – Used when trying to leave a Menu

**GUIDE** – brings up the GUIDE data

**VOD** – No function

**A** – Brings up the search menu

**B** – No function

**C** – Brings up the Recording Menu

**D** – Brings up the Episodes Menu for the current show you're watching

**VOLUME +/-** – Changes the volume up or down

**LAST** – Goes to the previous channel being watched

**MUTE** – turns the volume off, press again to turn back on

**CH +/-** – Channel up one or down one

**PG +/-** – when in the Guide view, can move one page (5 channels) at a time.

## Troubleshooting

**Device button does not blink when a key is pressed:** Replace the batteries with two (2) new AA alkaline batteries.

**Device button blinks when you press a button, but home entertainment component does not respond:** Make sure you are aiming the remote at your home entertainment component and that you are within 5m (15ft) of the component you are trying to control.

**If you experience issues with your digital television, resetting or reauthorizing your digital set top box may help:** Unplug the power cable for the digital box from the wall outlet. Wait approximately 10 seconds and plug it back in. Wait for approximately five minutes while your box restarts. Turn on your digital box by pressing the Power button on the front panel. The problem you were having should now be fixed.