



Welcome!

Welcome to Cable Cable's TV Guide! This guide will walk you through some of the features and user options available to you to improve your at home entertainment experience. We can't wait for you to explore our TV service!




Contents

- 4 - 5** Navigating Your Channel Guide
- 6** Using the Info Bar
- 7** Navigating Your Menu
- 8** Create a Favourites List
- 9** Recording Options
- 10-11** Parental Control Options
- 12** Remote Functions

Navigating Your Channel Guide



There are multiple TV Guides you can toggle through to display different channel groupings. To move through the different Guide options, press GUIDE multiple times on your remote. This will toggle through each Guide option one at a time. (Refer to the red circle shown in the image to the left)

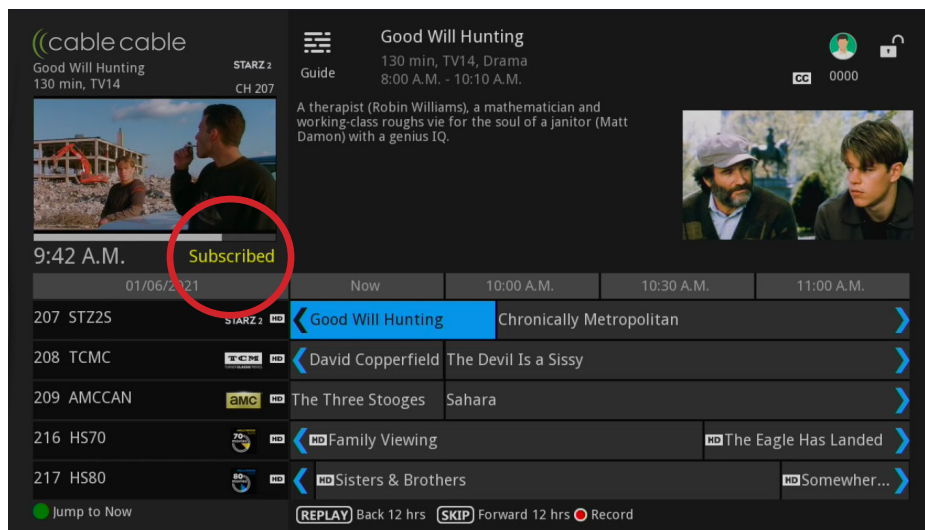

These options include: All channels, Subscribed channels, HD channels only, PPV options, Family, Free Previews, Movies, News, Sports.

All is every channel available through Cable Cable.

Subscribed is every channel included in your Cable Cable subscription.


Free Preview includes channels that are being offered for free by the network.

Navigating Your Channel Guide

Selecting a Channel on Your Program Guide

Use the up and down arrows on your remote to search through the available channels and select OK to choose your desired programming.

Pressing the OK button on your remote once will bring the channel up in the corner of your screen as a preview. Pressing a second time will bring the channel to full screen.

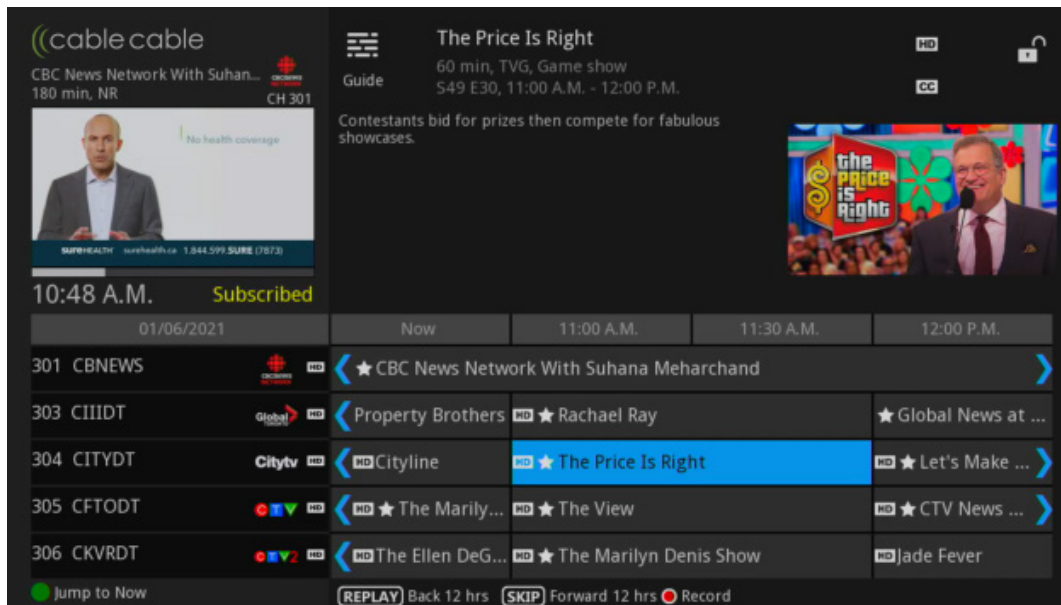


Channel Guide Icons

- ★ Star Icon - indicates that the program is a new episode
- Blue Arrows - indicate that the show is longer than current guide screen in view

Blue Bar - indicates the current show you are watching or have selected with the arrows.

The green "Jump to Now" circle that you see on the bottom left of your program guide correlates with the colored D button on your remote to return to the current time slot.


Using the Info Bar

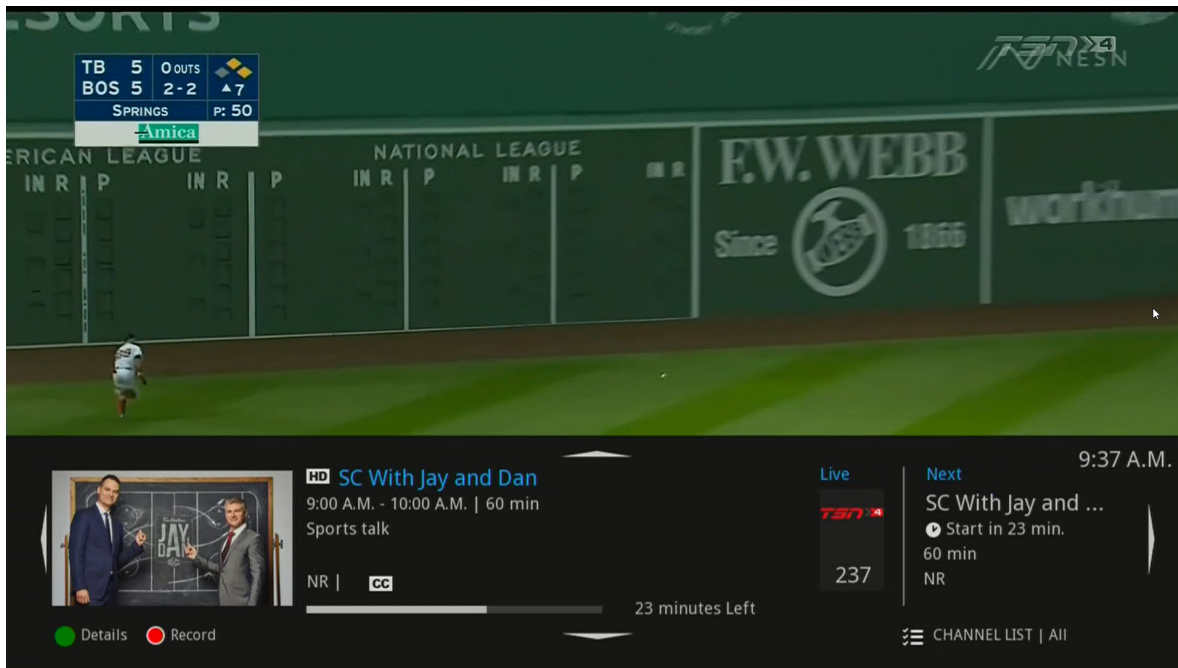

If you press INFO during a show, a bar will appear with more information about the show or movie you are watching.

From here, you can create a recording, or view upcoming show episodes.

Navigating Your Menu

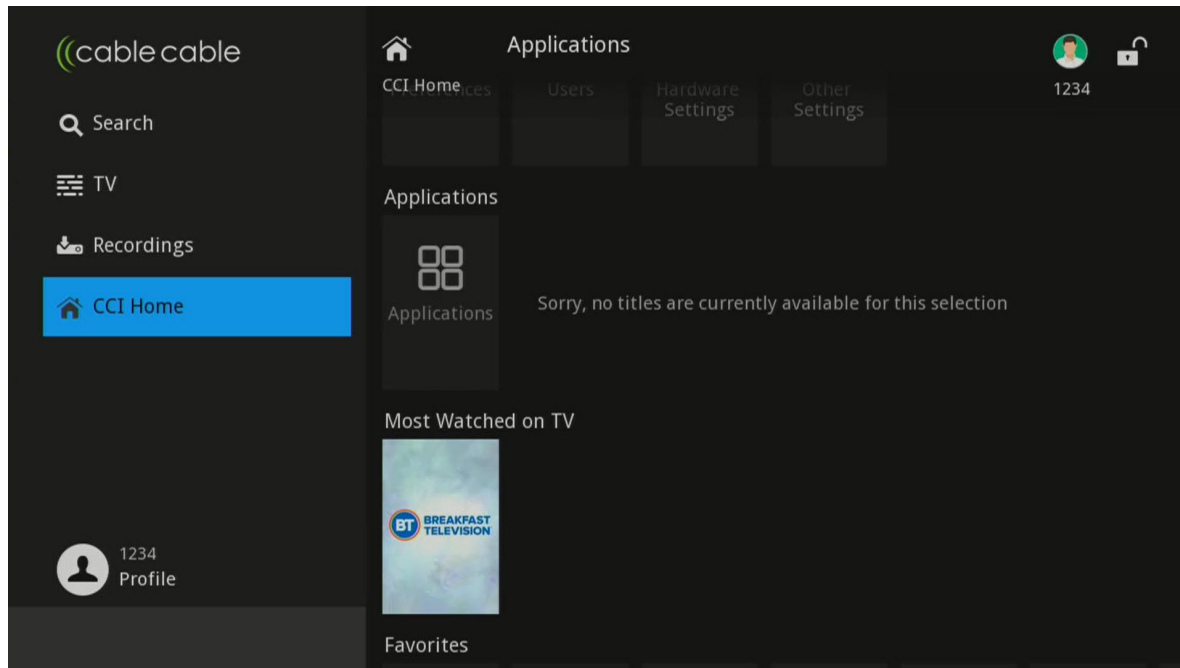


Press MENU and then OK on CCI HOME to open up view your recordings and recent searches, as well as your settings, applications, most watched channels and your favourites list(s).

Settings Navigation and Features

From the CCI HOME menu, use the directional arrows to find the Settings section and select which settings you would like to edit - preferences, users, etc.



Create a Favourites List

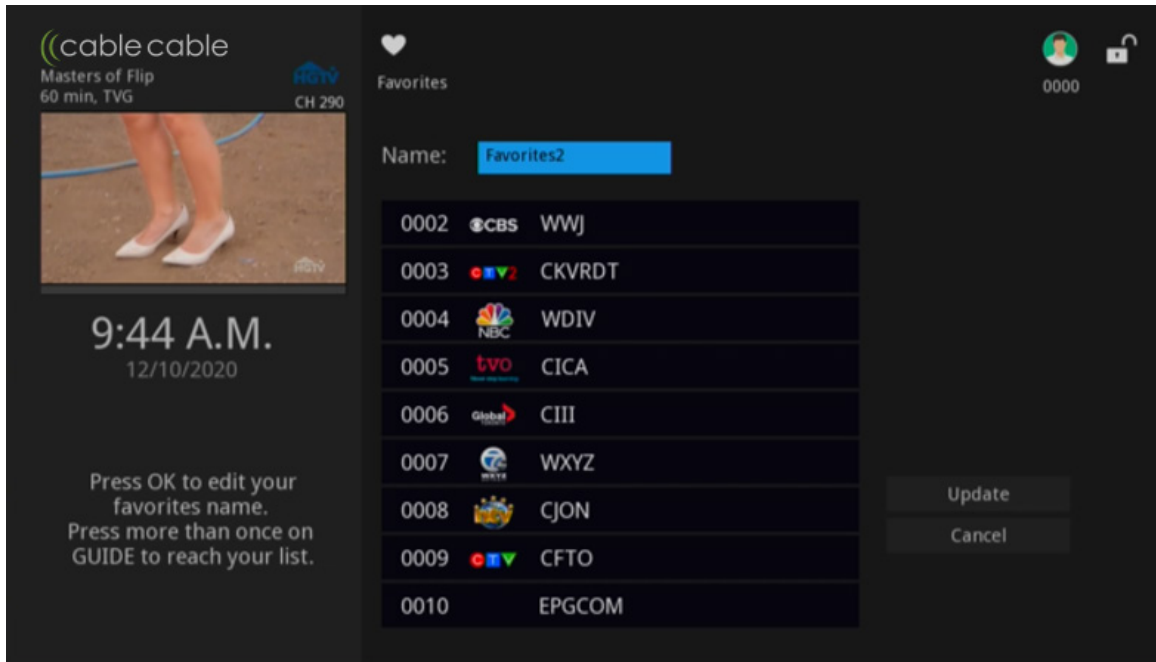

Creating a Favourites List

Press MENU on your remote, then the right directional arrow to access the CCI HOME menu. Use the up/down arrows to select FAVORITES (press OK). Select CREATE, then go through the list to select the channels you would like to a list. When complete, select UPDATE, then press EXIT on the remote to return to the TV Guide or main screen.

Recording Options

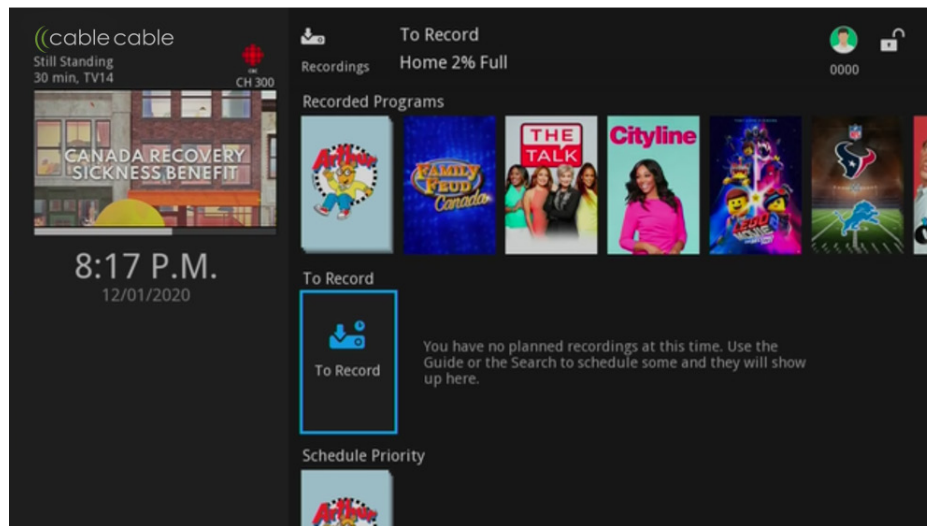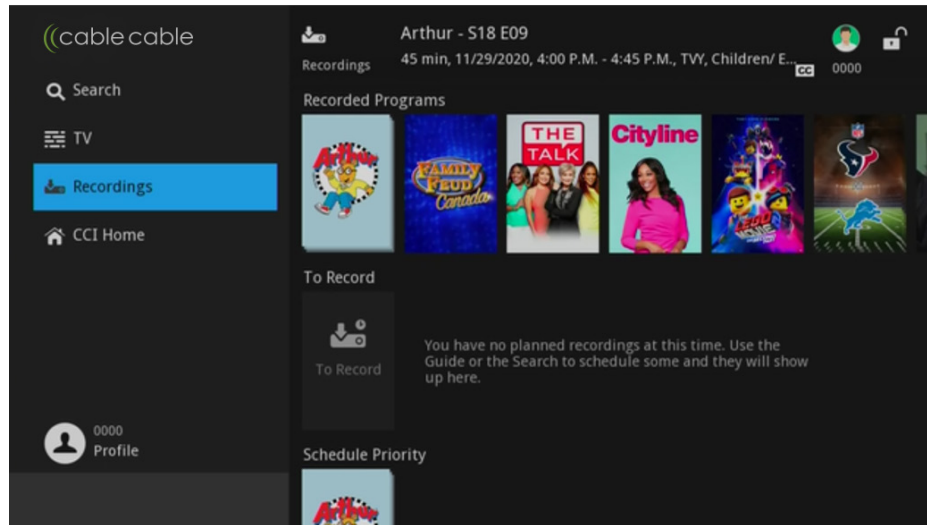

How to record a show or movie on your PVR

Option 1

From the GUIDE, use the directional arrows to navigate to the show on the day/time you would like to record. With the show highlighted, hit the REC button on the remote.

Option 2

Press the MENU button and scroll up to the SEARCH function to search for the title of the show you'd like to record. When your search is complete, select the show from the list by pressing OK. From the show page menu, press OK on CREATE RECORDING.

How to find and play a PVR recording

Press MENU on the remote, scroll up to RECORDINGS and press OK. Scroll to the recording you want to wish and press OK, then press OK on PLAY RECORDING.


How to manage your PVR recordings (delete or lock)

Press MENU on the remote twice, scroll up to RECORDINGS and press OK. Scroll to the recording you wish to manage and press OK. Scroll to MANAGE RECORDING and press OK, from here you can:

Delete the recording - remove it permanently from your listed recordings. You cannot undo this action!

Lock (/unlock) the recording - prevent it from being deleted by accident.

Parental Control Options

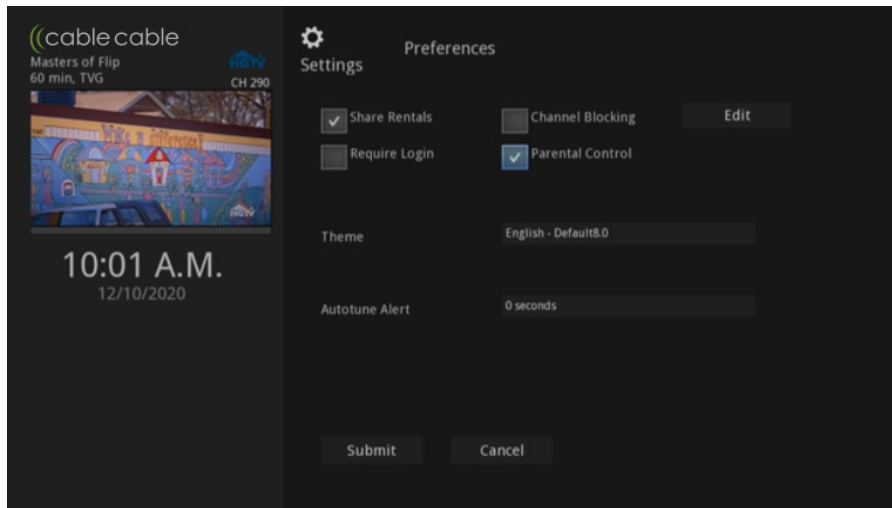

Press MENU on your remote and then OK to select CCI HOME.


Use the directional arrows on your remote to scroll down move through the CCI Home Menu to find the SETTINGS option on your screen.

Select PREFERENCES, then enter the default PIN CODE shown below.


PIN CODE: 1234

Use the directional arrows on the remote to move the blue box up from SUBMIT to PARENTAL CONTROL. Once the PARENTAL CONTROL box is highlighted in blue, you can select OK to remove or add a checkmark in the box.

Once you have the correct selection, use the arrows to move down to SUBMIT and use the OK button on your remote to complete your changes.

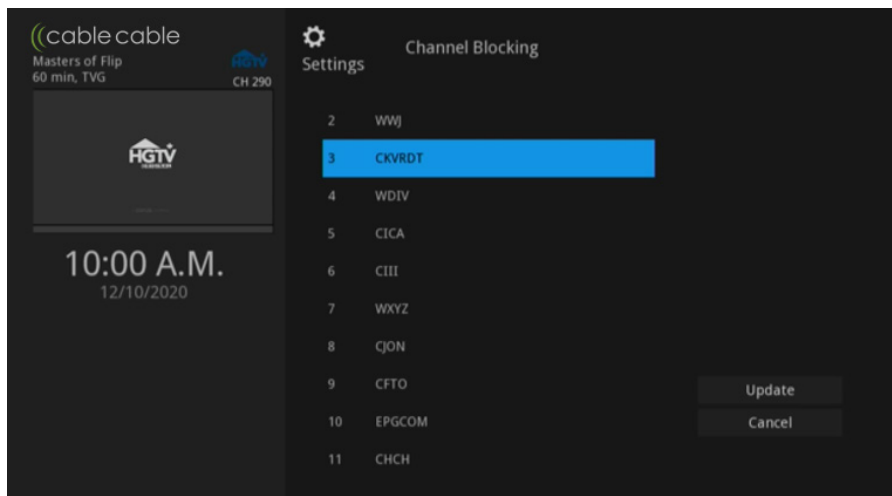

Parental Control Options

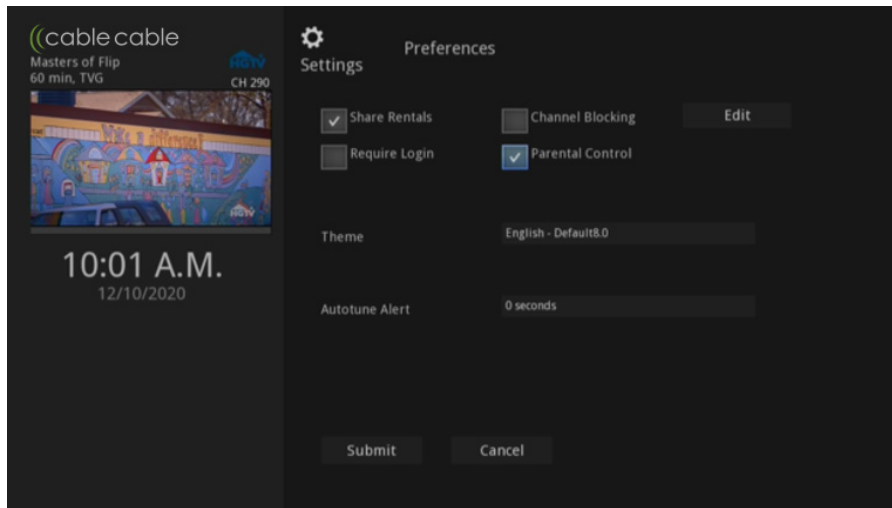


Blocking Channels


Follow steps 1-3 shown on the previous page to get to the PREFERENCES screen.

Use the directional arrows on the remote to move the blue box up from SUBMIT to EDIT.

Scroll through the list of channels and hit the OK button on each channel you would like to apply Parental Control to. When done, press the right directional arrow to move the blue box to the UPDATE button and hit OK.

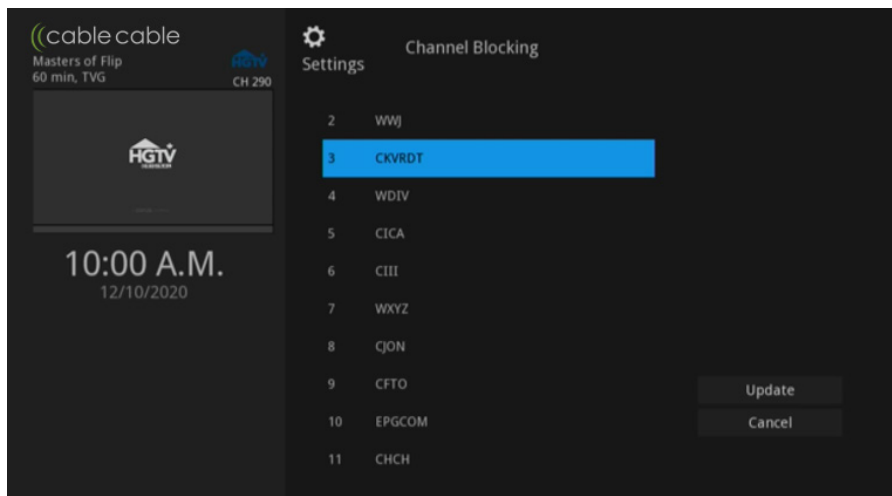

Remote Functions

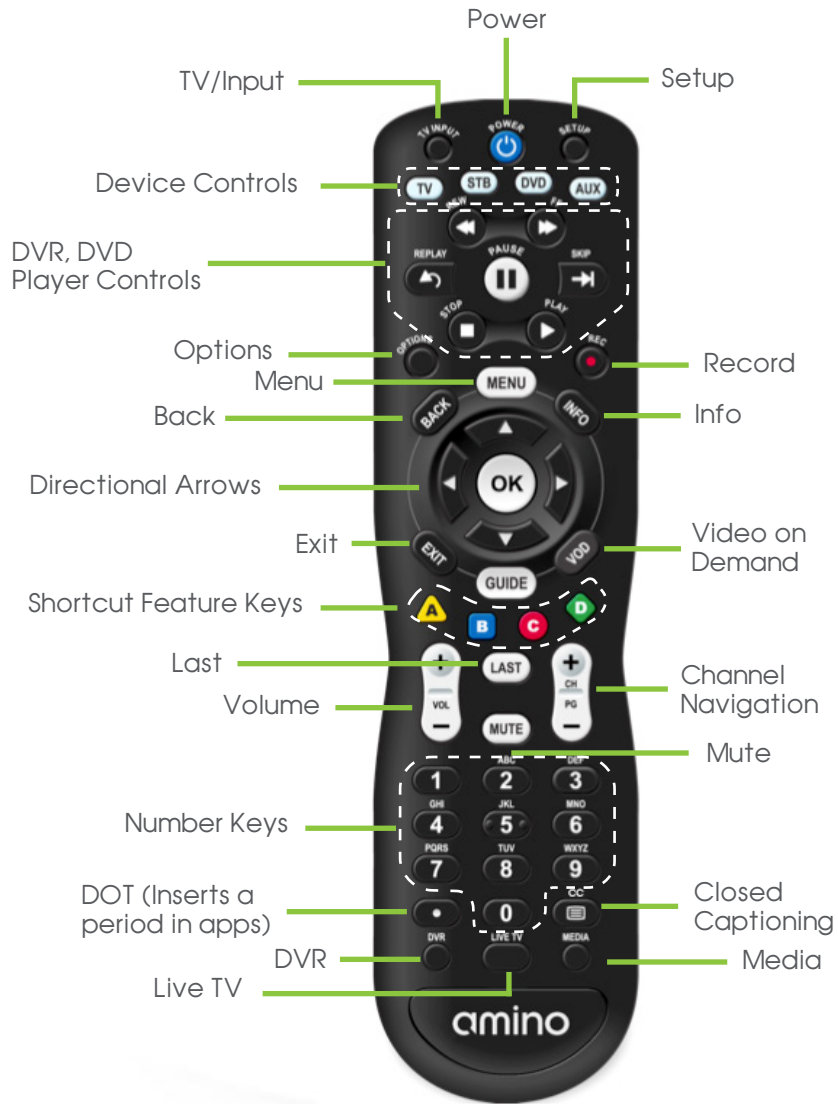

BACK - Brings up a list of recently watched channels, or if none are available, it will bring you to the Guide

MENU - Brings you to the 'Your TV' Menu

INFO - press INFO once to see the current program information. press INFO twice to bring up the Search Menu. Also has picture-in-picture of your current program, while you search for similar titles or recording options

EXIT - Used when trying to leave a Menu

GUIDE - brings up the GUIDE data

VOD - No function

A - Brings up the search menu

B - No function

C - Brings up the Recording Menu

D - Brings up the Episodes Menu for the current show you're watching

VOLUME +/- - Changes the volume up or down

LAST - Goes to the previous channel being watched

MUTE - turns the volume off, press again to turn back on

CH +/- - Channel up one or down one

PG - when in the Guide view, can move one page (5 channels) at a time.